FITTING A TIMBER FLOOR OVER AN ANHYDRITE SCREED
(WITHOUT UNDERFLOOR HEATING)

❶ ANHYDRITE SCREED

Manufactured from an industry by-product offering greatly improved finish and underfloor heating performance. The screed must be below 75% RH and laitance removed before the application of the primer.

❷ MXS140 DAMP PROOF MEMBRANE


This should be applied by either a roller or poured into ribbons along the surface and trowelled out using a 3mm trowel with a coverage of approx 12.5 – 15 sqmetres / 4 litre unit. The MXS140 will isolate moisture up to 87% RH.

❸ MXA200 ADHESIVE

This should be trowelled out using the Marldon 3mm notched trowel with a coverage of approx. 1KG/ sqmetre.

❶ TIMBER FLOOR

Refer to Manufacturer for compatibility.

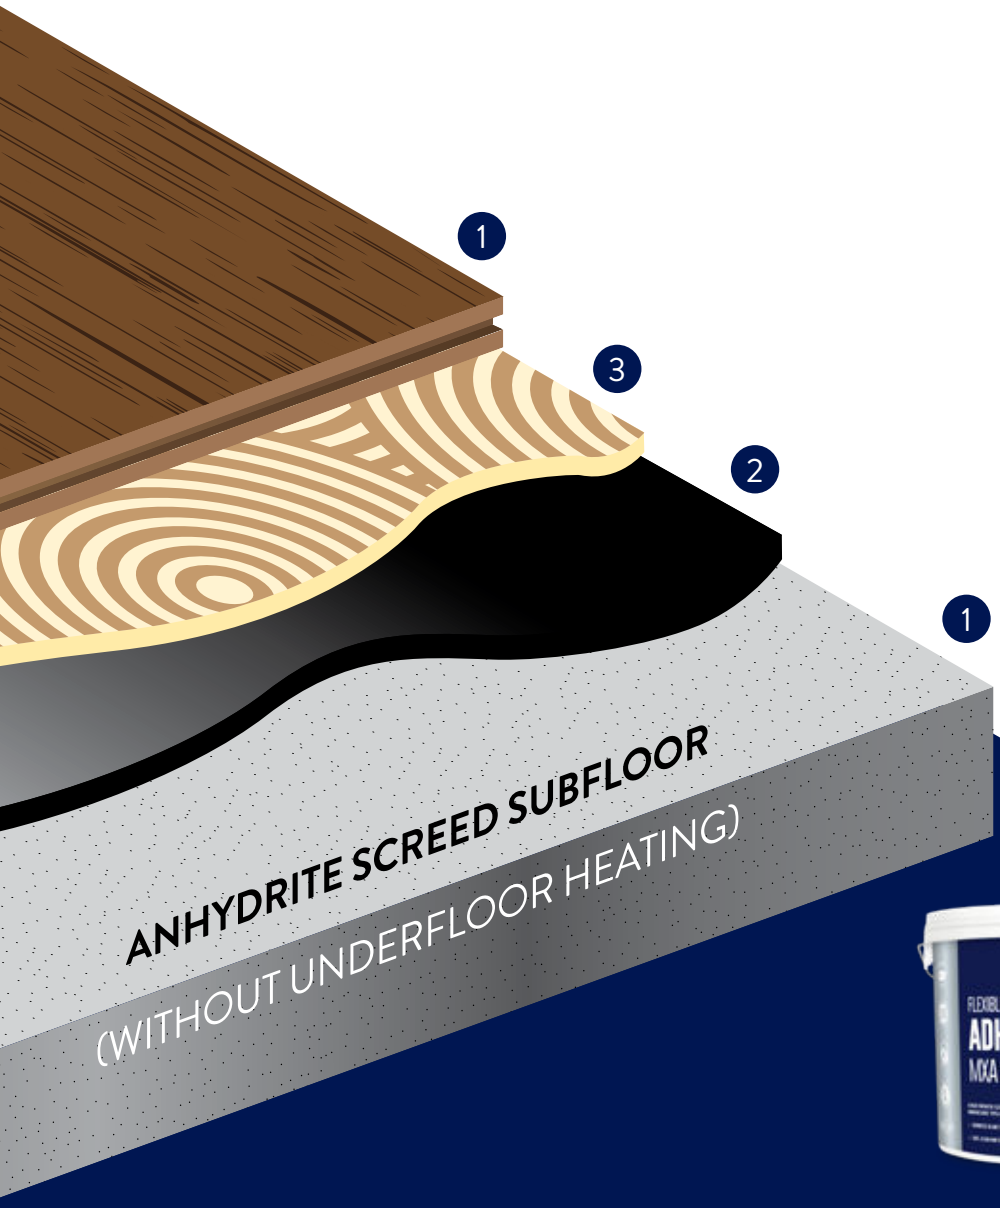

VOC - NIL and Fully BREEAM accredited*

**Adhesive*

GEV-EMICODE EC 1 very low emission



01772 696600 | info@marldonuk.com | www.marldonuk.com