# FITTING A TIMBER FLOOR OVER AN ANHYDRITE SCREED
## (WITH UNDERFLOOR HEATING)

### ❶ ANHYDRITE SCREED

Manufactured from an industry by-product offering greatly improved finish and underfloor heating performance.

The screed must be below 75% RH with the UFH fully commissioned, and laitance removed before the application of the primer.

### ❷ MXS120 PRIMER


Primer is applied by roller over the entire area and has a coverage of approx. 8m$^2$ per litre. This should be used if there is no uniform porosity. Primer should only be applied when laitance has been removed.

### ❸ MXA200 ADHESIVE

This should be trowelled out using the Marldon 3mm notched trowel with a coverage of approx. 1KG/sqm.

### ❹ TIMBER FLOOR

Refer to Manufacturer for compatibility.

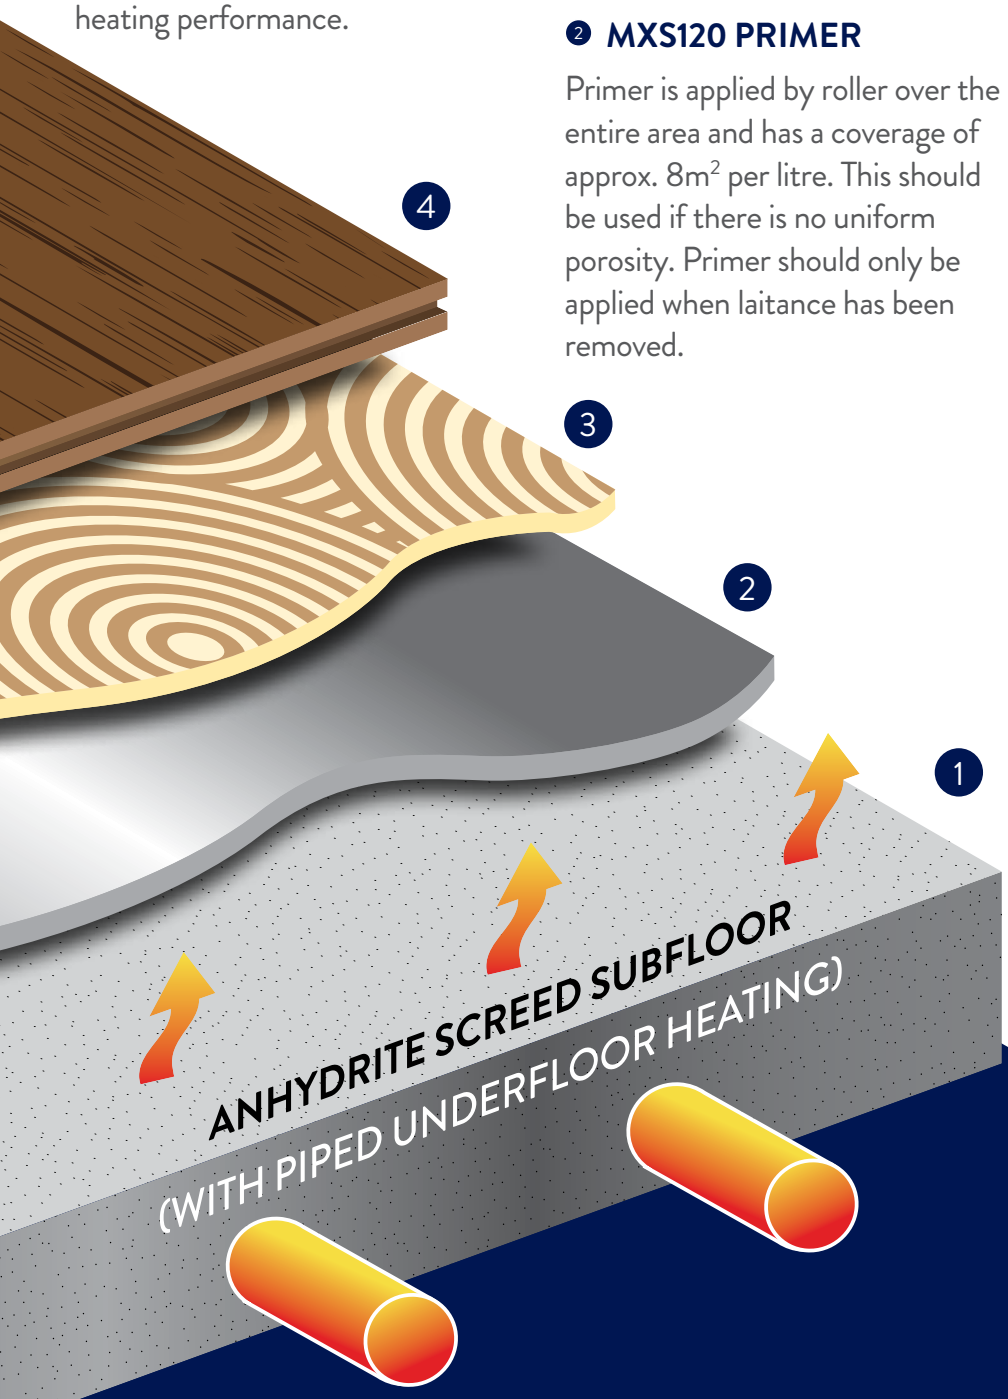


01772 696600 | info@marldonuk.com | www.marldonuk.com