LAYING A TIMBER FLOOR OVER AN ANHYDRITE SUBFLOOR

❶ ANHYDRITE SCREED

Manufactured from an industry by-product offering greatly improved finish and underfloor heating performance. The screed must be below 75% RH and laitance removed before the application of the primer.

❷ MXS120 PRIMER


Primer is applied by roller over the entire area and has a coverage of approx. 8sqm per litre. This should be used if there is no uniform porosity. Primer should only be applied when laitance has been removed.

❸ MXA200 ADHESIVE

This should be trowelled out using the Marldon 3mm notched trowel with a coverage of approx. 1KG/sqm.

❹ TIMBER FLOOR

Refer to Manufacturer for compatibility.

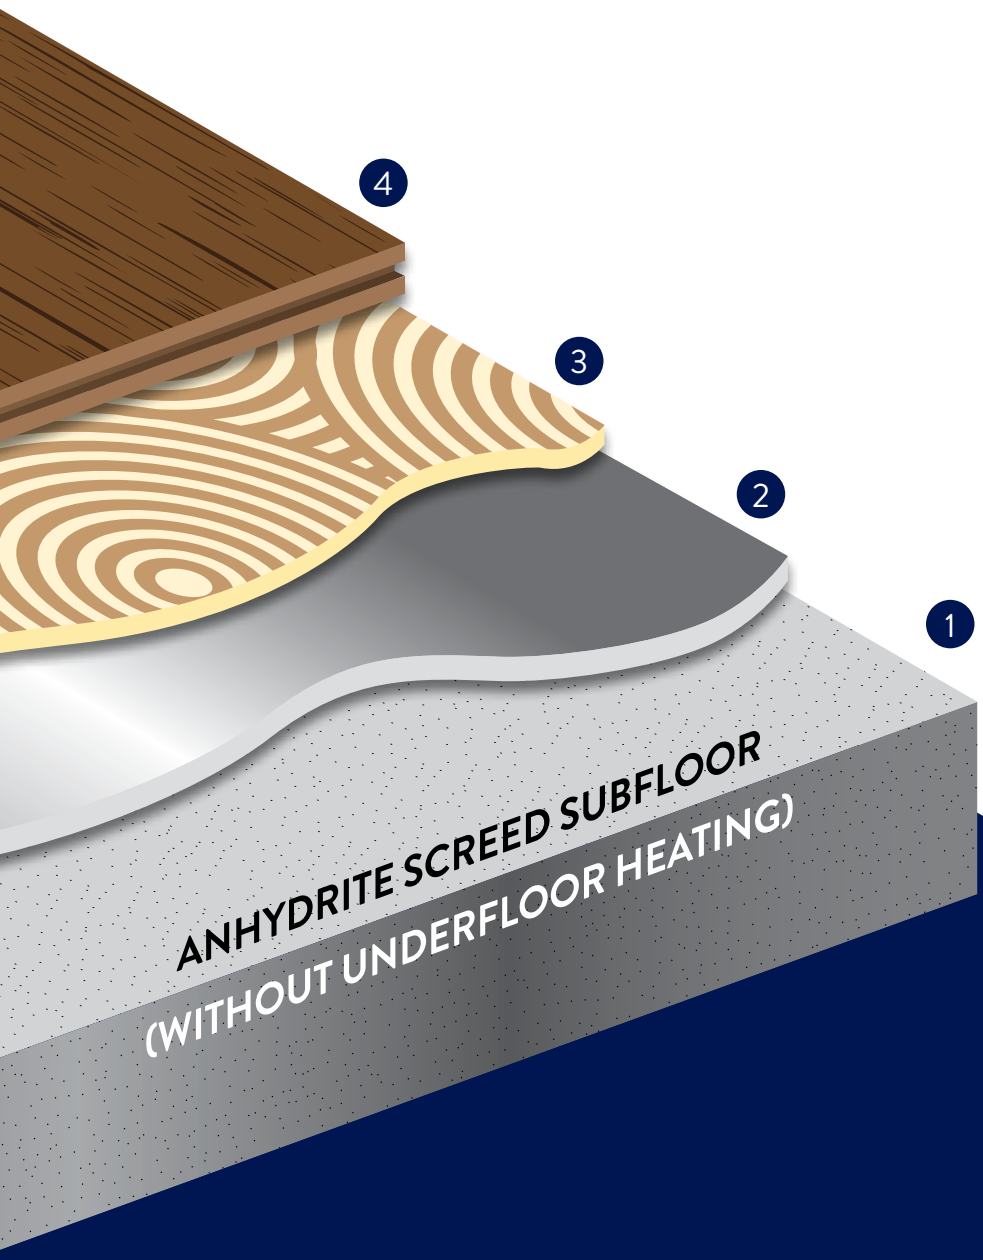



01772 696600 | info@marldonuk.com | www.marldonuk.com