FITTING A TIMBER FLOOR OVER A CONCRETE SUBFLOOR

❶ CONCRETE SUBFLOOR

❷ MXS120 PRIMER


Primer is applied by roller over the entire area and has a coverage of approx. 8m^2 per litre. This should be used if there is no uniform porosity. Primer should only be applied when laitance has been removed.

❸ MXA200 ADHESIVE

This should be trowelled out using the Marldon 3mm notched trowel with a coverage of approx. 1KG/sqm.

❹ TIMBER FLOOR

Refer to Manufacturer for compatibility.

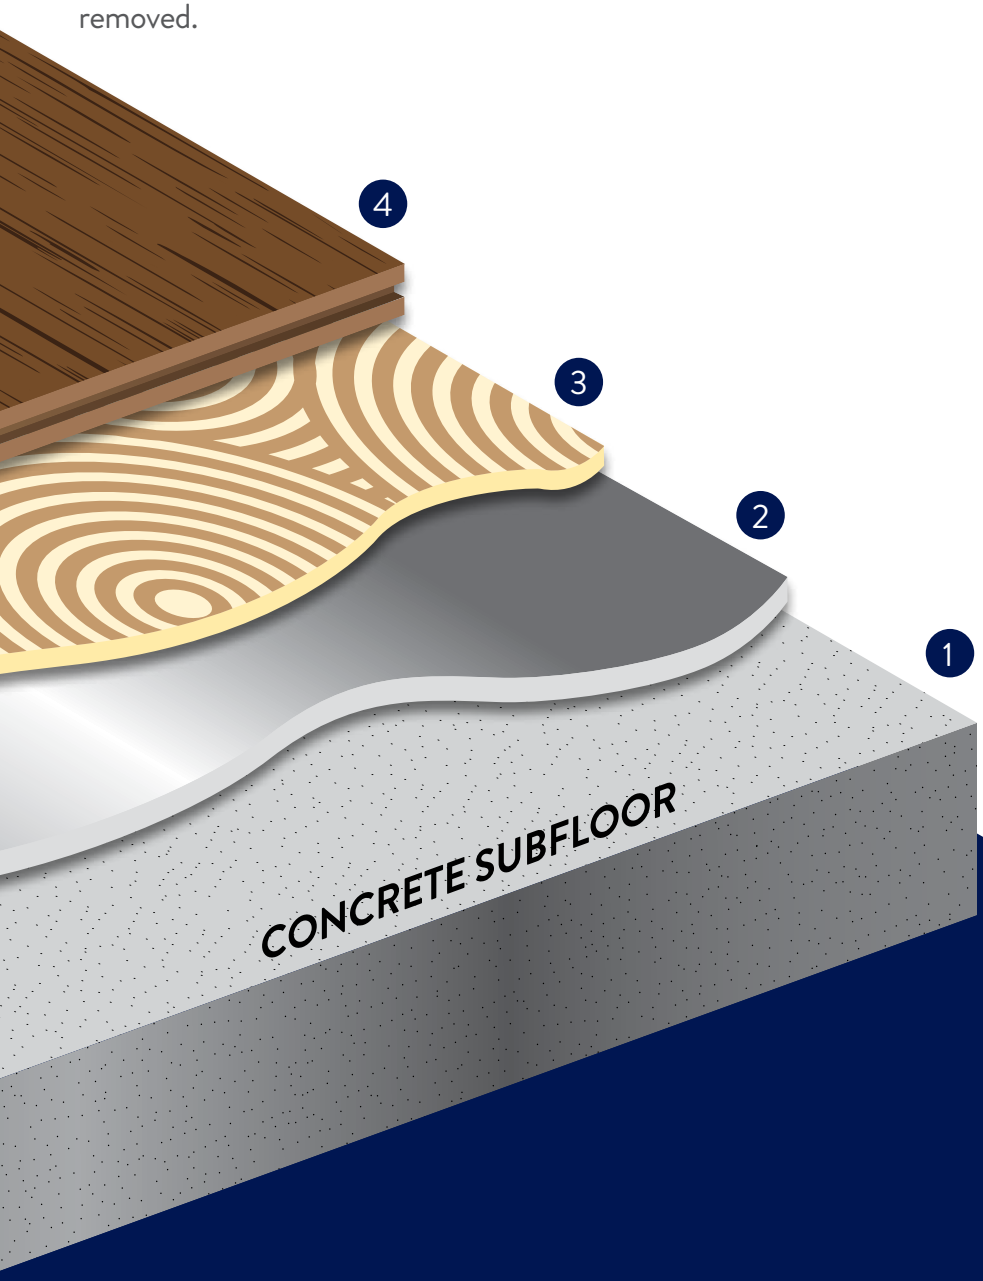

VOC - NIL and Fully BREEAM accredited*

**Adhesive*



01772 696600 | info@marldonuk.com | www.marldonuk.com