LEVELLING A DAMP ANHYDRITE SUBFLOOR

1 ANHYDRITE SCREED

Manufactured from an industry by-product offering greatly improved finish and underfloor heating performance. The screed must be below 75% RH and laitance removed before the application of the primer.

2 MXS140 DAMP PROOF MEMBRANE

This should be applied by either a roller or poured into ribbons along the surface and trowelled out using a 4mm trowel with a coverage of approx 12.5 – 15sqm/4 litre unit. The MXS140 will isolate moisture up to 97% RH.

3 MXS130 EPOXY PRIMER

This should be applied by roller at a rate of 75 – 100sqm/5KG unit before applying the MXS110 levelling compound.

4 MXS110 LEVELLING COMPOUND

This should be applied by float/ trowel at a coverage rate of 5sqm at an average 3mm thickness/bag.

5 MXS120 PRIMER


Primer is applied by roller over the entire area and has a coverage of approx. 8sqm per litre. This should be used if there is no uniform porosity. Primer should only be applied when laitance has been removed.

6 MXA200 ADHESIVE

This should be trowelled out using the Marldon 3mm notched trowel with a coverage of approx. 1KG/sqm.

7 TIMBER FLOOR

Refer to Manufacturer for compatibility.

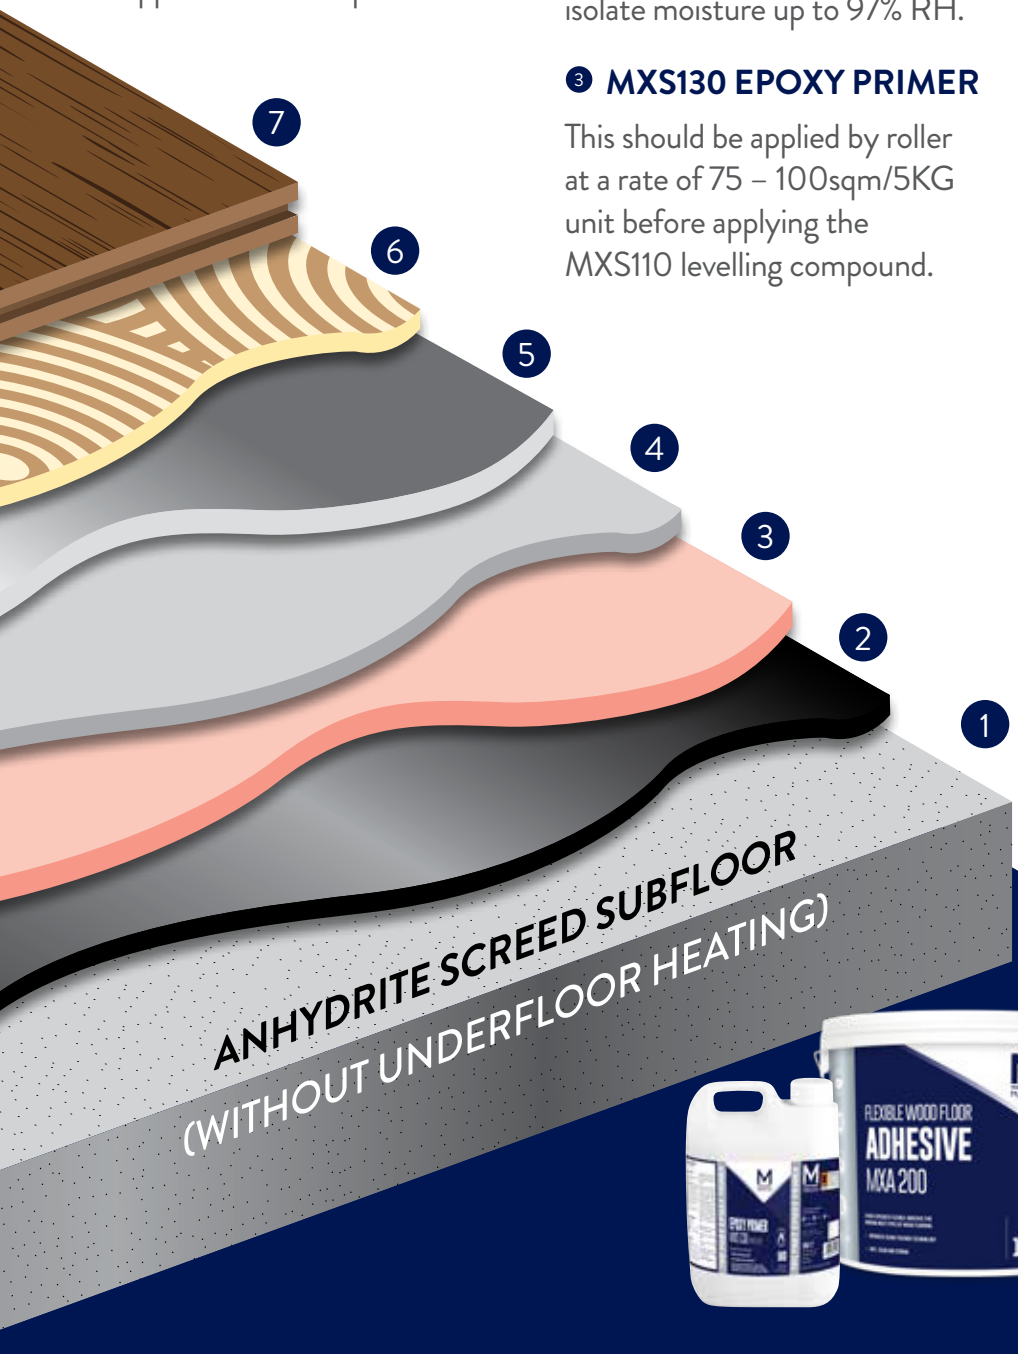



01772 696600 | info@marldonuk.com | www.marldonuk.com