FITTING A TIMBER FLOOR OVER STRATA SOUND REDUCING UNDERLAY OVER TIMBER/ CHIPBOARD SUBFLOOR

❶ TIMBER / CHIPBOARD SUBFLOOR

❷ MXA200 ADHESIVE

This should be trowelled out using the Marldon 3mm or 4mm notched trowel with a coverage of approx. 1KG/sqmetre.

❸ STRATA UNDERLAYMENT


Please refer to separate data sheet for further information regarding this product and application*.

❹ MXA200 ADHESIVE

Repeat Step 2.

❺ TIMBER FLOOR

Refer to Manufacturer for compatibility.

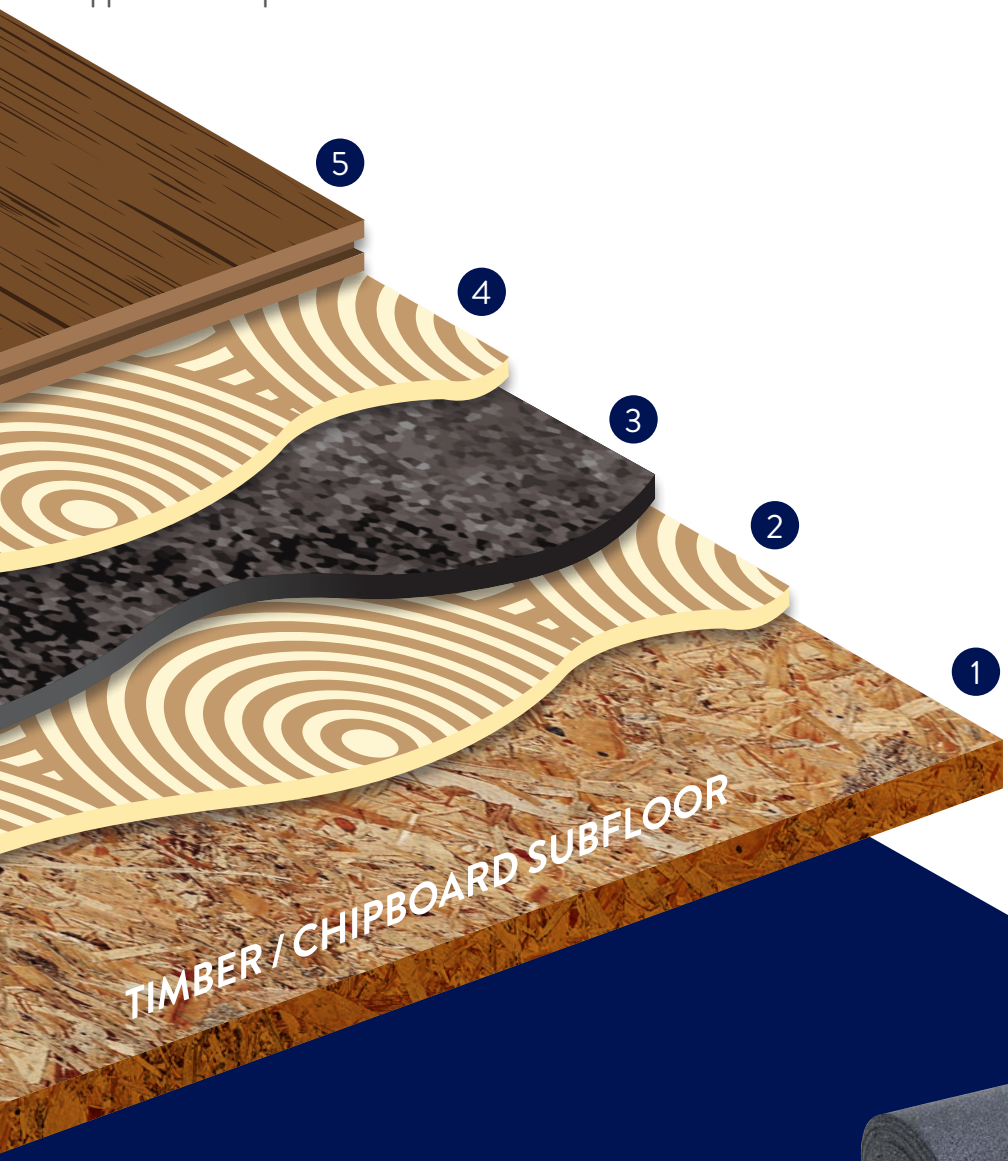

* Please note: It is necessary to achieve Part E, 2003 compliance for such floor constructions - Please ask for more details.

VOC - NIL and Fully BREEAM accredited*

**Adhesive*

GEV-EMICODE EC 1 very low emission



01772 696600 | info@marldonuk.com | www.marldonuk.com