FITTING A TIMBER FLOOR OVER STRATA SOUND REDUCING UNDERLAY OVER UNDERFLOOR HEATING

❶ CONCRETE SUBFLOOR

❷ MXS140 DAMP PROOF MEMBRANE

This should be applied by either a roller or poured into ribbons along the surface and trowelled out using a 4mm trowel with a coverage of approx 12.5 – 15 sqmetres / 4 litre unit.

❸ MXA200 ADHESIVE

This should be trowelled out using the Marldon 3mm or 4mm notched trowel with a coverage of approx. 1KG/sqmetre.

❹ STRATA UNDERLAYMENT


Please refer to separate data sheet for further information regarding this product and application*.

❺ MXA200 ADHESIVE

Repeat Step 3.

❻ TIMBER FLOOR

Refer to Manufacturer for compatibility.

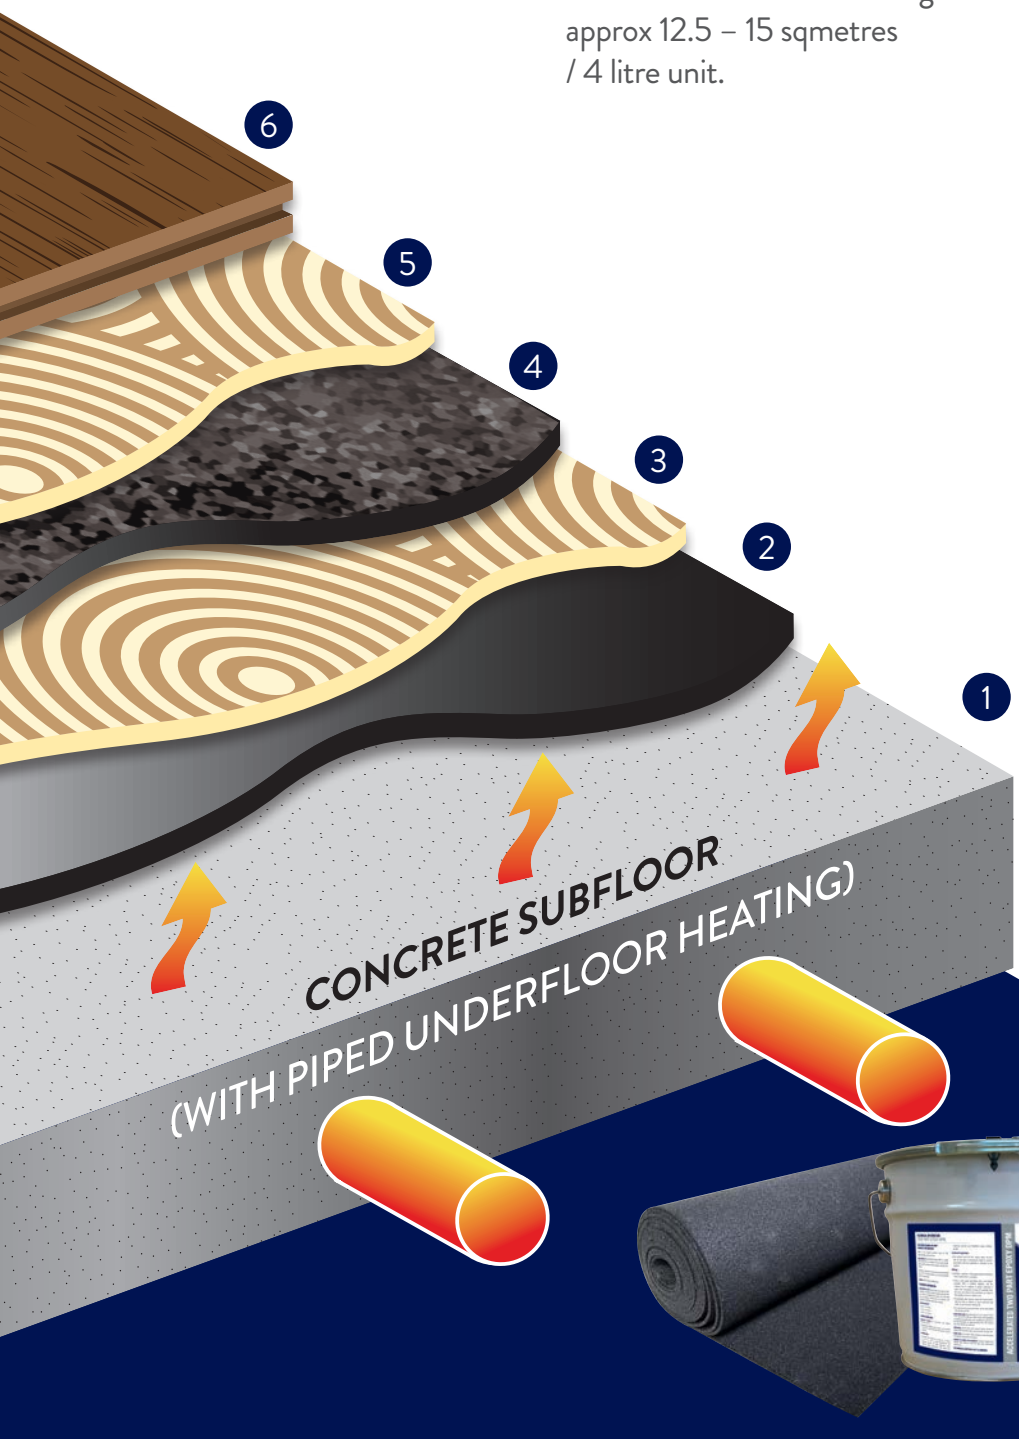

* Please note: It is necessary to achieve Part E, 2003 compliance for such floor constructions - Please ask for more details.

VOC - NIL and Fully BREEAM accredited*

**Adhesive*

GEV-EMICODE EC 1 very low emission



01772 696600 | info@marldonuk.com | www.marldonuk.com